


Always in motion.

Continuous flows and high efficiency in the sugar house with DRP massecuite pumps from BMA.



Looking after the crystals.

Massecuite pumps from BMA.

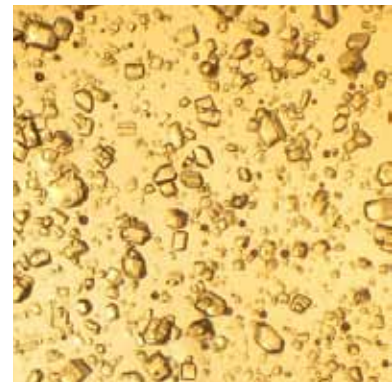

Massecuite

Pumps in sugar factories move a range of materials including highly viscous massecuites, which present considerable conveying challenges. Rotary piston pumps are particularly suitable for jobs such as moving crystal suspensions between the vacuum pan and the centrifugal station or cooling crystalliser.

Massecuites are extremely viscous sugar crystal and syrup mixtures with a high crystal content. The new DRP series of massecuite pumps from BMA has been developed especially for these media and their particular characteristics. Their operating principle is that of a rotary piston pump with a scraper: the scraper glides across the piston, dividing the pump into a suction side and a discharge side. As the piston rotates, massecuite is sucked into the pump and moved to the discharge side.

Design features


- Dual chamber design from BMA
- Large chamber volume thanks to enhanced piston shape
- Minimal gap widths
- Compact design
- The feed and discharge branches are positioned at a 90° angle
- Easy to integrate with piping systems thanks to standard flanges and optional mating flanges

Materials conveyed

(up to 90 °C in continuous operation, temporarily higher)

- A/B/C crystal suspensions
- A/B/C seed massecuites
- Affination magma
- Refined-sugar massecuites

Operating principle of a rotary piston pump with a scraper

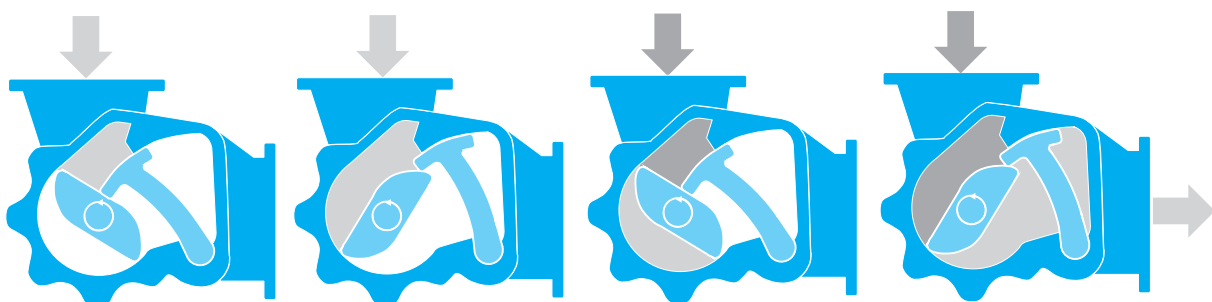



Bringing out the best. The benefits at a glance.

With their large chamber volume, massecuite pumps from BMA offer impressive performance at surprisingly low speeds. This reduces wear and tear and is extremely gentle on the crystals.

Perfect operation: efficient processes

- Conveying at very low speeds is gentle on the crystals
- Broad range of delivery rates: 1 to 120 m³ /h
- Frequency converter for precise control of the flow rate
- High efficiency thanks to minimal gap widths
- Hard-wearing design with select materials (such as hardened pistons) and low speeds
- A sturdy design for a long service life
- Easy restart after downtimes, depending on the properties of the medium and the pump's operating conditions

Perfect interaction: service when installed

- Excellent cleaning of the whole process section via standard connections
- Easy-to-access pump interior
- Improved shaft diameter makes for easy handling of the attachments (bearings, seals, couplings) during maintenance
- High proportion of carry-over parts for streamlined spare parts inventory management
- Gearbox protected against product ingress

Perfect process: impressively smooth running

- Far less pulsation thanks to special piston shape and arrangement
- Dual-chamber principle results in even flow rates and minimal vibration in pipes
- Smooth running properties thanks to large pump volume and low speeds

Reliability and hygiene

- Excellent safety thanks to implementation of EU machine standards
- No contamination of massecuite with gearbox oil
- Use of only minimal food-grade grease in the product section




**Perfect fit:
Easily tailored to your requirements**

- Models with a mechanical seal or stuffing box
- Optional external fan for a broad conveying range¹⁾
- Variable branch position: 0°, 45°, 90°


- Direction of flow: clockwise or anti-clockwise; easily changed on site
- Configurable with pressure levels of 6 and 10 bar; can be retrofitted
- Optional mating flanges for simple integration with all standard piping systems

Technical data

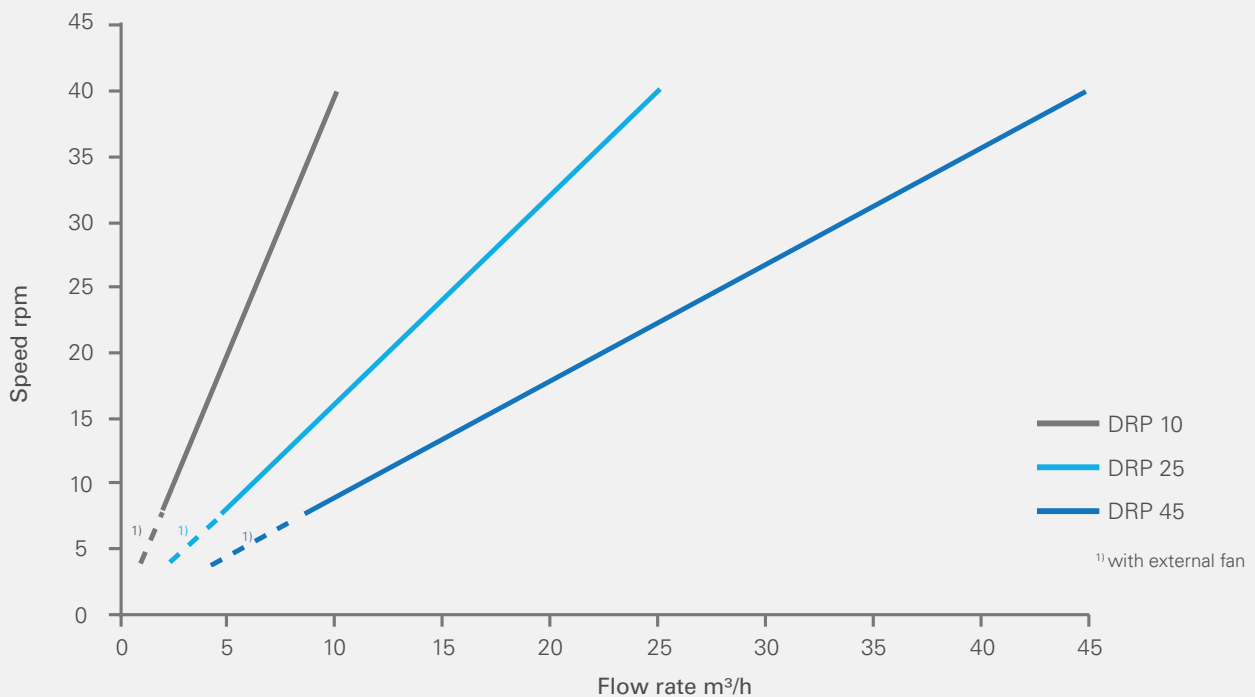


In brief:

Facts and figures about massecuite pumps from BMA.

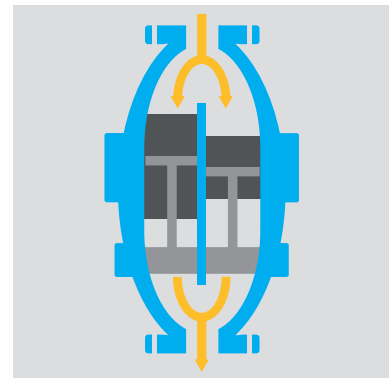

Cross section of the pump chamber

Massecuite pumps from BMA are essentially rotary piston pumps with a coupling, a coupling guard and a gear motor. They are shipped as complete units on a base plate. Depending on where the pumps are installed, the feed branch can be positioned on the left or the right. The model type denotes the direction of flow when looking onto the pump's drive shaft (cross section A-A). The position of the suction branch can be adjusted in 45° steps; the feed and discharge branches are positioned at a 90° angle.

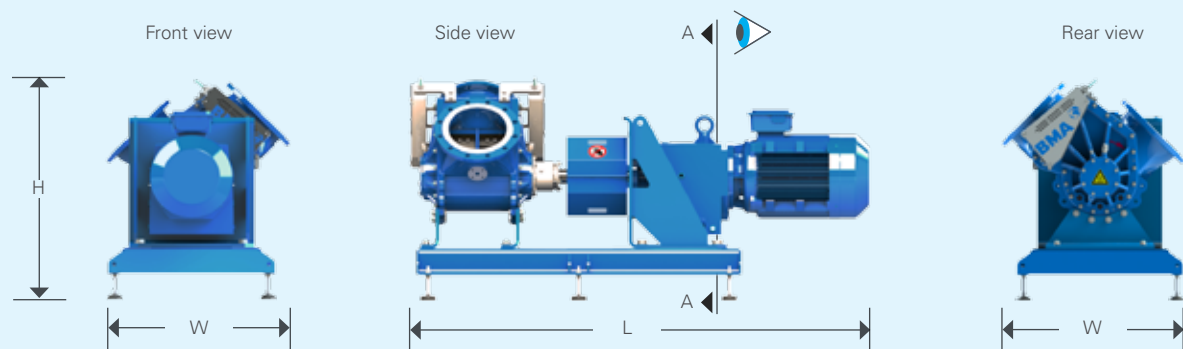

Range of sizes³⁾

Size	Length L		Width W	Height H	Connections	Flow rate
	mm	mm				
DRP 10	1,650	1,760	700	900	DN 150	1 ¹⁾ /2 - 10
DRP 25	1,950	2,020	870	1,000	DN 250	2.5 ¹⁾ /5 - 25
DRP 45	2,020	2,385	995	1,160	DN 300	4.5 ¹⁾ /9 - 45
DRP 75 ²⁾	+++ coming soon		+++ coming soon	+++ coming soon	+++	7.5 ¹⁾ /15 - 75
DRP 120 ²⁾	+++ coming soon		+++ coming soon	+++ coming soon	+++	12 ¹⁾ /24 - 120


¹⁾ With external fan ²⁾ Configurable from Q1 2019

³⁾ Dimensions are for guidance and approximate planning only; they should be taken as reference values. The final dimensions are subject to a pump's specific configuration and can be found in the specifications. Length measurements are for pumps without an external fan. Height and width measurements are for a 45° setting of the branches and subject to change depending on the base plate.

Variable branch positions (cross section A-A)

Anti-clockwise model

Clockwise model

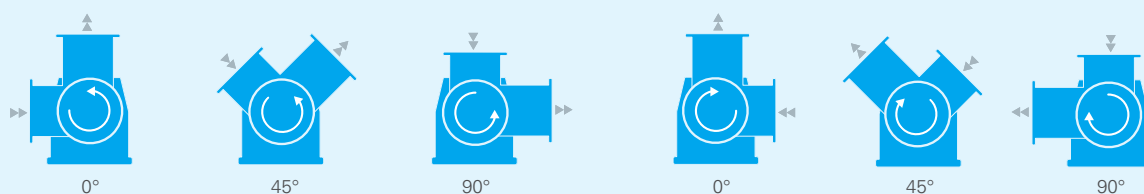

BMA Automation
Phone +49 531 804-261
Fax +49 531 804-269
automation@bma-de.com

BMA Brazil
Phone +55 19 3935-6810
info@bma-br.com

BMA MENA Industries
Phone/Fax +216 71 181 823
info@bma-mena.com

BMA America
Phone +1 970 351 0878
Fax +1 970 351 0190
info@bma-us.com

BMA China
Phone +86 871 6832 5226
Fax +86 871 6832 6329
sales@bma-cn.com

BMA Russia
Phone/Fax +7 473 260 6991
info@bma-ru.com

BMA France
Phone +49 531 804-0
Fax +49 531 804-216
sales@bma-de.com

BMA – Passion for Progress

For over 160 years, BMA has been developing and manufacturing machinery and equipment for industrial-scale sugar production. BMA system solutions for sugar factories and refineries are in demand wherever minimum energy consumption and consistently high product quality are top priorities. With a more than 800-strong workforce around the globe and in-depth knowledge of process engineering, BMA has an exceptional service profile in the sugar industry.



© BMA
Postfach 32 25
38022 Braunschweig
Germany
Phone +49 531 804-0
Fax +49 531 804-216
sales@bma-de.com

www.bma-worldwide.com